

# Purolite® A400

Polystyrenic Gel, Type I Strong  
Base Anion Resin, Chloride form

## PRINCIPAL APPLICATIONS

- Demineralization - Industrial
- Silica Removal

## ADVANTAGES

- High operating capacity
- Efficient regeneration
- Good kinetic performance

## REGULATORY APPROVALS

- IFANCA Halal Certified
- LPPOM MUI Halal Certified
- Kosher Certified

## TYPICAL PACKAGING

- 1 ft<sup>3</sup> Sack
- 25 L Sack
- 5 ft<sup>3</sup> Drum (Fiber)
- 1 m<sup>3</sup> Supersack
- 42 ft<sup>3</sup> Supersack

## TYPICAL PHYSICAL & CHEMICAL CHARACTERISTICS:

Polymer Structure	Gel polystyrene crosslinked with divinylbenzene
Appearance	Spherical Beads
Functional Group	Type I Quaternary Ammonium
Ionic Form	Cl <sup>-</sup>
Total Capacity	1.3 eq/L (28.4 Kgr/ft <sup>3</sup> ) (Cl <sup>-</sup> form)
Moisture Retention	48 - 54 % (Cl <sup>-</sup> form)
Particle Size Range	300 - 1200 µm
< 300 µm (max.)	1 %
Uniformity Coefficient (max.)	1.7
Reversible Swelling, Cl <sup>-</sup> → OH <sup>-</sup> (max.)	20 %
Specific Gravity	1.08
Shipping Weight (approx.)	680 - 715 g/L (42.5 - 44.7 lb/ft <sup>3</sup> )
Temperature Limit	100 °C (212.0 °F) (Cl <sup>-</sup> form)
Temperature Limit	60 °C (140.0 °F) (OH <sup>-</sup> form)



**Americas**  
T +1 610 668 9090  
F +1 610 668 8139  
americas@purolite.com

**EMEA**  
T +44 1443 229334  
F +44 1443 227073  
europe@purolite.com


**Asia Pacific**  
T +86 571 876 31382  
F +86 571 876 31385  
asiapacific@purolite.com

# Hydraulic Characteristics

## PRESSURE DROP

The pressure drop across a bed of ion exchange resin depends on the particle size distribution, bed depth, and voids volume of the exchange material, as well as on the flow rate and viscosity of the influent solution. Factors affecting any of these parameters—such as the presence of particulate matter filtered out by the bed, abnormal compressibility of the resin, or the incomplete classification of the bed—will have an adverse effect, and result in an increased head loss. Depending on the quality of the influent water, the application and the design of the plant, service flow rates may vary from 10 to 40 BV/h.


## PRESSURE DROP ACROSS RESIN BED

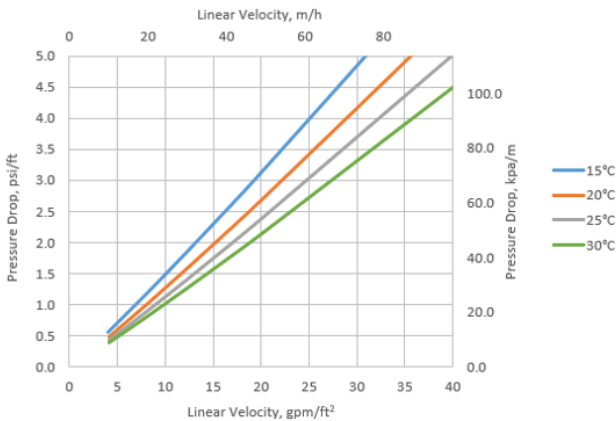

## BACKWASH

During up-flow backwash, the resin bed should be expanded in volume between 50 and 70% for at least 10 to 15 minutes. This operation will free particulate matter, clear the bed of bubbles and voids, and reclassify the resin particles ensuring minimum resistance to flow. When first putting into service, approximately 30 minutes of expansion is usually sufficient to properly classify the bed. It is important to note that bed expansion increases with flow rate and decreases with influent fluid temperature. Caution must be taken to avoid loss of resin through the top of the vessel by over expansion of the bed.

## BACKWASH EXPANSION OF RESIN BED

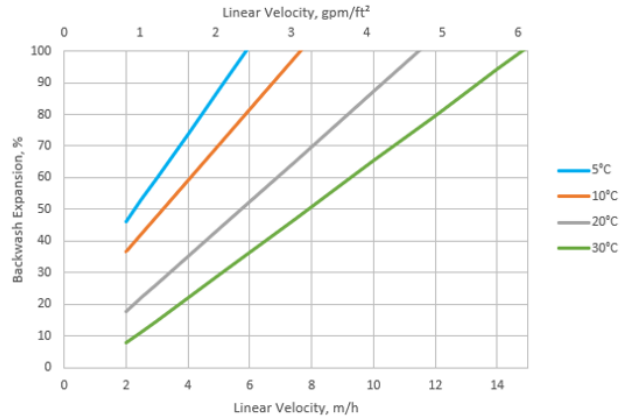

**Americas**  
 T +1 610 668 9090  
 F +1 610 668 8139  
[americas@purolite.com](mailto:americas@purolite.com)

**EMEA**  
 T +44 1443 229334  
 F +44 1443 227073  
[europe@purolite.com](mailto:europe@purolite.com)

**Asia Pacific**  
 T +86 571 876 31382  
 F +86 571 876 31385  
[asiapacific@purolite.com](mailto:asiapacific@purolite.com)